

Thank you for purchasing this Dynojet kit. This kit has been developed for a motorcycle which is set to the parameters listed at the right in the "Stage" description. If your motorcycle does not meet any of these parameters please check with Dynojet before installation. For technical assistance contact your Dynojet distributor or call Dynojet U.S.A. (800)-992-4993



8122.001

U.S. Models Only

1997-98 Buell M2 Cyclone


THUNDERSLIDE JET KIT

For mildly tuned machines using the stock or high flow airbox. May also be used with a good aftermarket exhaust system.

2191 Mendenhall Dr. Suite 105
North Las Vegas, NV 89031
TEL: 702-399-1423
FAX: 702-399-1431
8am-5pm Pacific Time
Monday through Friday

Website Address
<http://www.dynojet.com>

The manufacturer and seller make no warranties express or implied which extend beyond the description of the goods contained herein. Any description of this product is for the purpose of identifying it and shall not be deemed to create an express warranty.

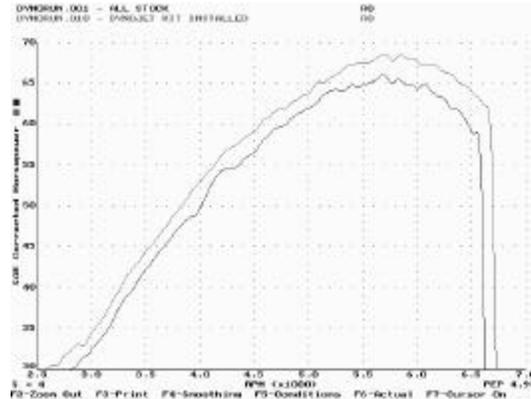

This graph shows a typical gain with a Dynojet jet kit.

WARNING
NO SMOKING!
NO OPEN FLAME!
WHILE INSTALLING
YOUR DYNOJET KIT

Parts List		
1	Main Jet	BJ170
1	Main Jet	BJ175
1	Main Jet	BJ185
1	Main Jet	BJ195
1	Thunder Slide	DTS005
1	Diaphragm Retainer Upper	DTS002
1	Diaphragm Retainer Lower	DTS004
1	Fuel Needle	DNO891
1	E-Clip	DE0001
1	Needle Spacer	THNR01
1	Thunder Nozzle	THNOZ2
1	Check Ball	BB #1/8
1	Check Ball Weight	DW070
1	Slide Spring	DSP009
1	Emulsion Tube	DET007
1	Slow Jet	DJSJ045
1	Diaphragm Instructions	DI8122S
1	Plug Drill	DD #5/32
1	Screw	DS0001

Installation Instructions

DYNOJET

8122.001

1. Remove the carburetor float bowl. Remove the stock main jet and emulsion tube (Fig. A), sometimes referred to as the main jet holder. Replace the stock emulsion tube with the Dynojet emulsion tube provided (DET007). When the Dynojet emulsion tube is fully seated there will still be threads visible. Install the Dynojet main jet provided. Use the BJ170 main jet with a completely stock bike. Use the BJ175 main jet with an aftermarket airbox. With an aftermarket exhaust and stock or aftermarket airbox use the BJ185 main jet.
2. Carefully remove the float bowl gasket and save for reinstallation. Using a vice (Fig. E) clamp on to the stock accelerator pump nozzle and remove by twisting and pulling it out of the float bowl. Remove the stock check valve. Install the check ball (BB1/8) and brass weight (DW070) into the float bowl (Fig. B). Press the Dynojet Thunder Nozzle into the stock pump nozzle hole and lightly tap into place (Fig. C). The spray hole in the nozzle should face the brass float bowl drain tube (Fig. D).
3. Install the 45 slow jet provided (DJSJ045).
4. Carefully reinstall the float bowl gasket and the float bowl.
5. Locate the fuel mixture plug (Fig. A), if you see a screw head at Fig. A proceed to the adjusting procedure. With the DD #5/32 drill bit provided, carefully drill through the plug. **NOTE:** The mixture screw is directly underneath this plug, be ready to pull back on the drill the instant you break through. Use screw provided to secure and remove this plug. Carefully turn mixture screw in until lightly seated, then back out 3-1/2 turns.

Fig. E

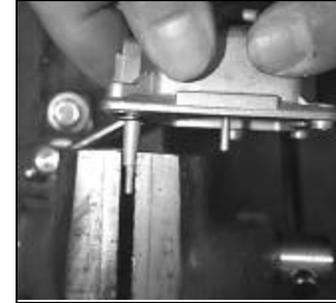


Fig. A

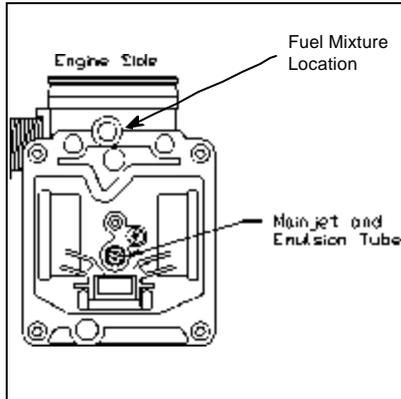


Fig. B


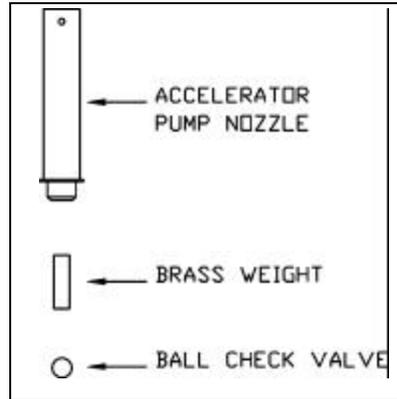


Fig. C



Fig. D

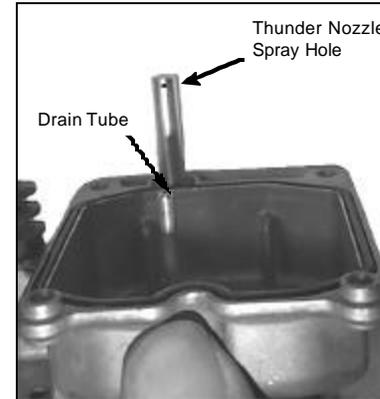

THUNDERSLIDE DIAPHRAGM & NEEDLE INSTALLATION INSTRUCTIONS

DYNOJET
DI8122S.001

1. Remove the carb top, slide spring, needle retainer, needle and vacuum slide.
2. Carefully remove the original rubber diaphragm from metal slide by gently pulling at the inner edge of the diaphragm in a circular motion until diaphragm is out of the stock slide retaining groove. The stock rubber diaphragm will be installed on the Thunderslide.
3. To assemble the stock diaphragm on the Thunderslide, first install the larger slide retainer (DTS004) with the radial grooves facing up on to the slide (Fig. A). You will notice that the slide has a collar on the top which you will have to push the larger retainer past.
4. Lay the diaphragm on the lower retainer in the same direction it was on the stock slide.
5. Press the small slide retainer (DTS002) with the grooves facing down, on top of the diaphragm (Fig. A). You should hear a "snap" as it goes together. Make sure it is flat and secure on top of the slide and that the diaphragm is centered.
6. Install the e-clip on groove #4 of the Dynojet needle (Fig. D). Install the Thunderslide, Dynojet needle, needle spacer, white needle retainer and Dynojet slide spring (DSP009) into the carb body (Fig. B).

Fig. D


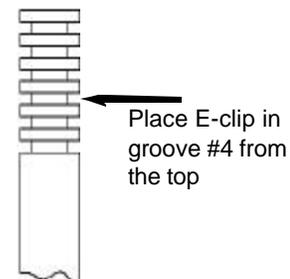


Fig. A

THUNDER SLIDE

DIAPHRAGM

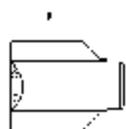

LOWER RETAINER DTS004
INSTALL TO STOCK SLIDE
GROOVES UPWARD

UPPER RETAINER DTS002
INSTALL TO LOWER RETAINER
GROOVES UPWARD

Fig. B

